

## Sensor Operation and Charging

### To Charge:

- Flip main power switch to off position
- Connect charger to power unit
- Make sure charging indicator LED on unit is lit
- When charging is complete, unplug the charging cable
- When battery is low, the LED labeled "LOW" will light up on power unit

### To Operate:

- Disconnect charger and flip switch to on position
- Make sure both the blue power unit LED and the green LED on the main board are lit
- Close and latch lid; make sure that the lip of the lid is clear of obstruction
- The yellow LED on the main board flashes for each write cycle

## Sensor Operation and Charging

